HOME
DECORATORS
COLLECTION

BF-20366 OXFORD COLLECTION 3-SHELF BOOKCASE

INV#28774

ASSEMBLY INSTRUCTIONS

Made In China

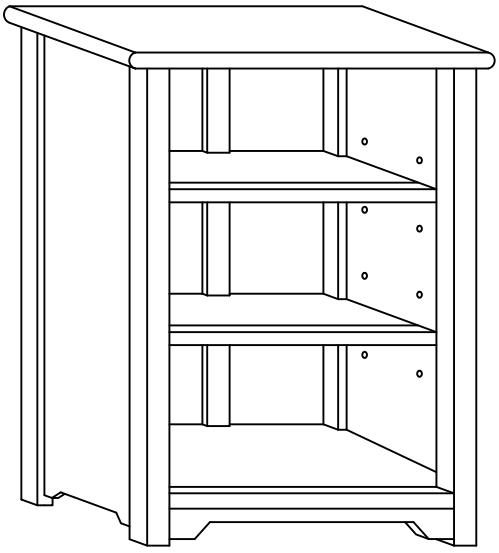

Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B 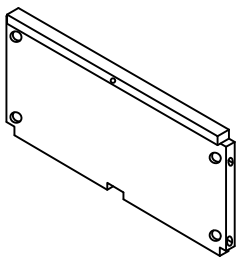 BOTTOM PANEL-1PC	C 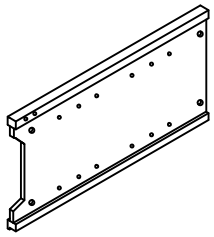 LEFT SIDE PANEL-1PC
D 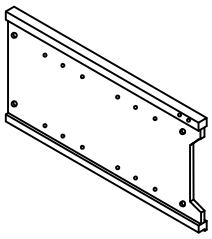 RIGHT SIDE PANEL-1PC	E 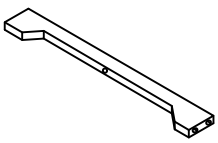 LOW PANEL-1PC	F 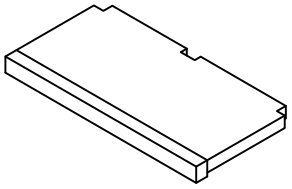 SHELVES-2PCS
G SHELF SUPPORTS-8PCS	H CAM-LOCKS-8PCS	I 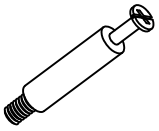 CAM-BOLTS-8PCS
J DOWELS-4PCS	K 6mm × 1/2" SCREWS-20PCS	L CAM-TOOL-1PC

M  BACK PANELS-2PCS	O 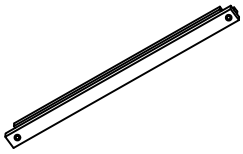 REAR PANEL GUIDE-1PC	P 6mm × 3/4" SCSREWS-2PCS
Q 8mm × 1" SCREWS-1PC	W1 fall down prevention HOOKS-2PCS	X1 fall down prevention 6mm × 3/4" SCREWS-2PCS
Y1 fall down prevention GECKOS-2PCS	Z1 fall down prevention 7mm × 7/8" SCREWS-2PCS	

REMARK: THE LETTER STICKED IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

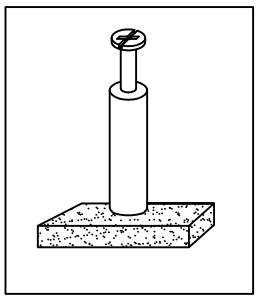

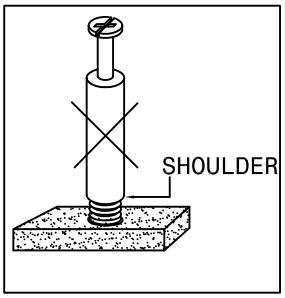

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

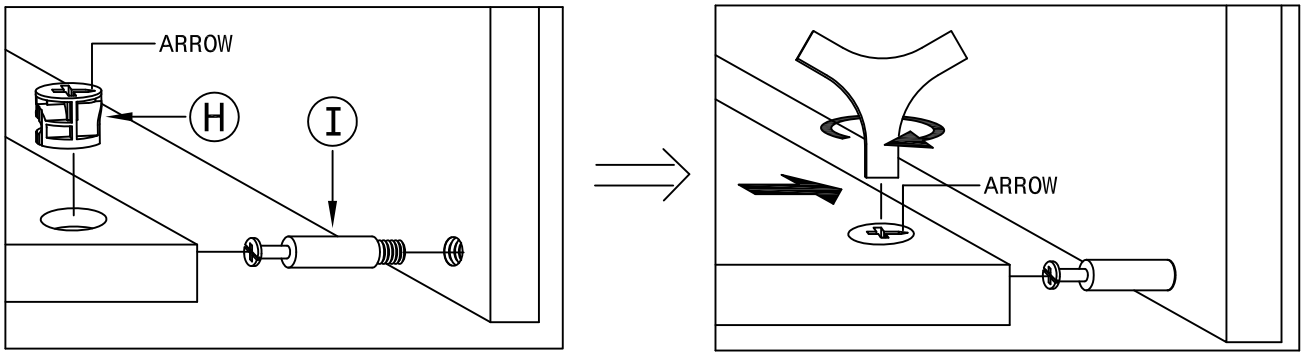

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

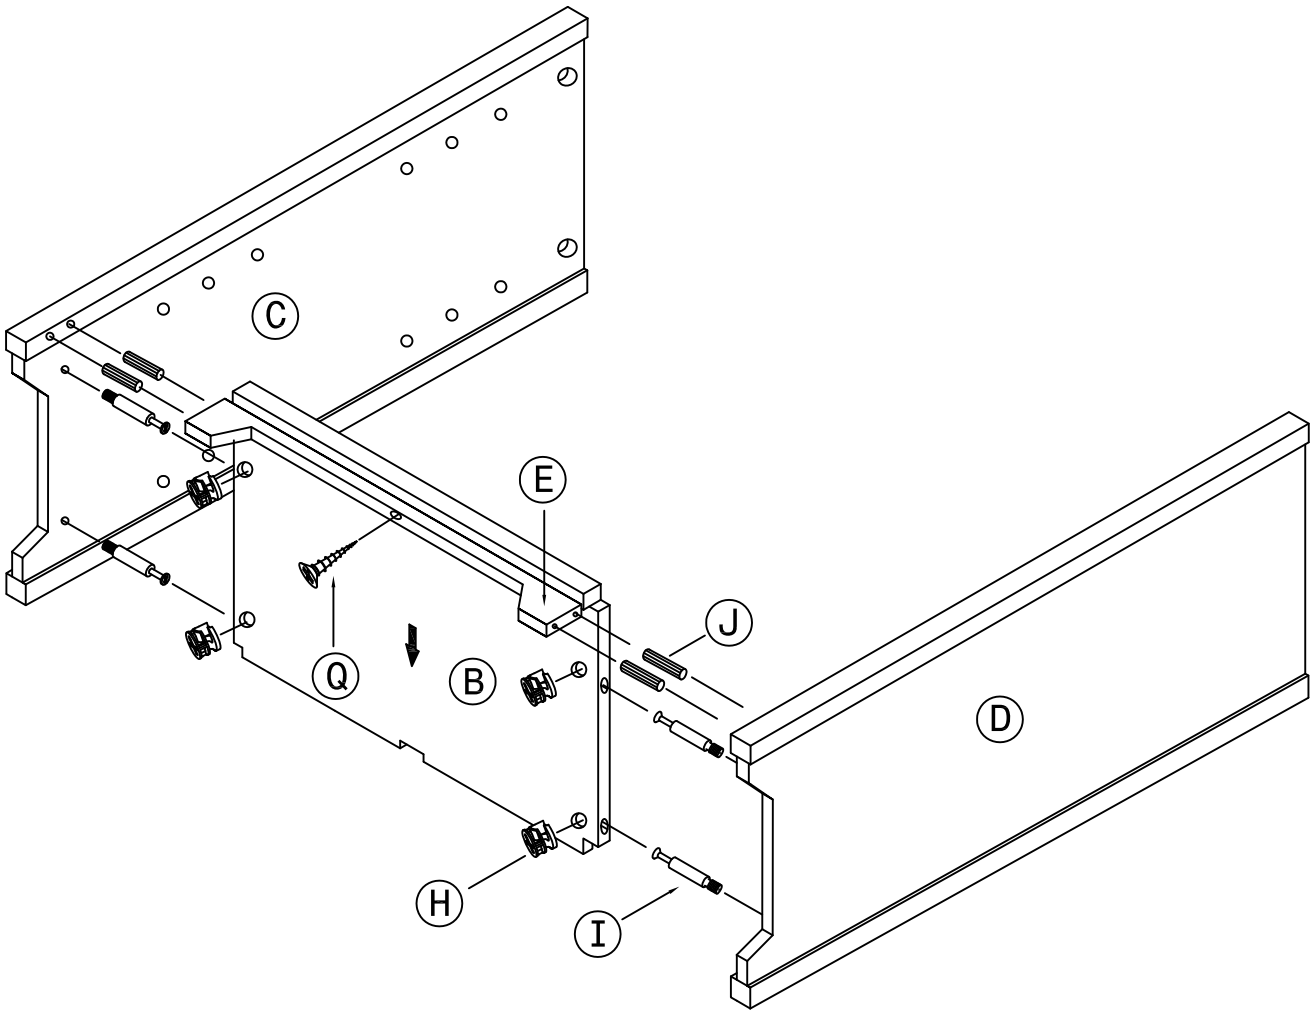

1).ASSEMBLE THE SIDE PANEL(C/D).

- ATTACH THE LOW PANEL(E) TO BOTTOM PANEL(B) USING SCREWS(Q).
- INSERT THE 4 DOWELS(J) INTO THE HOLES IN THE LOW PANEL(E).
- ROTATE THE 4 CAM-BOLTS(I) INTO THE HOLES IN THE SIDE PANEL(C/D).
- PLACE CAM-BOLTS(I) INTO THE HOLES IN THE BOTTOM PANEL(B) AND ATTACH USING 4 CAM-LOCKS(H).

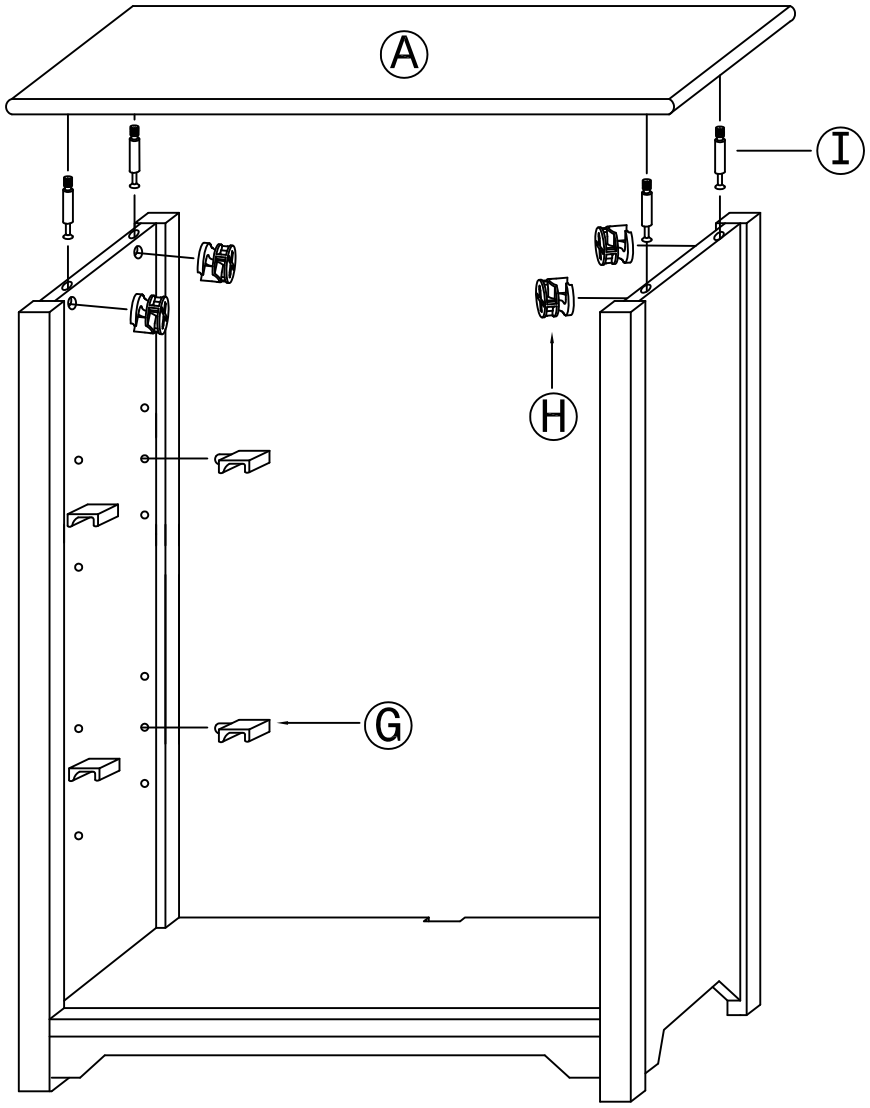

2).ASSEMBLE THE TOP PANEL(A).

- INSERT THE 8 SHELF SUPPORTS(G) INTO THE HOLES IN THE SIDE PANEL(C/D).
- ROTATE THE 4 CAM-BOLTS(I) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(I) INTO THE HOLES IN THE SIDE PANEL(C/D) AND ATTACH USING 4 CAM-LOCKS(H).

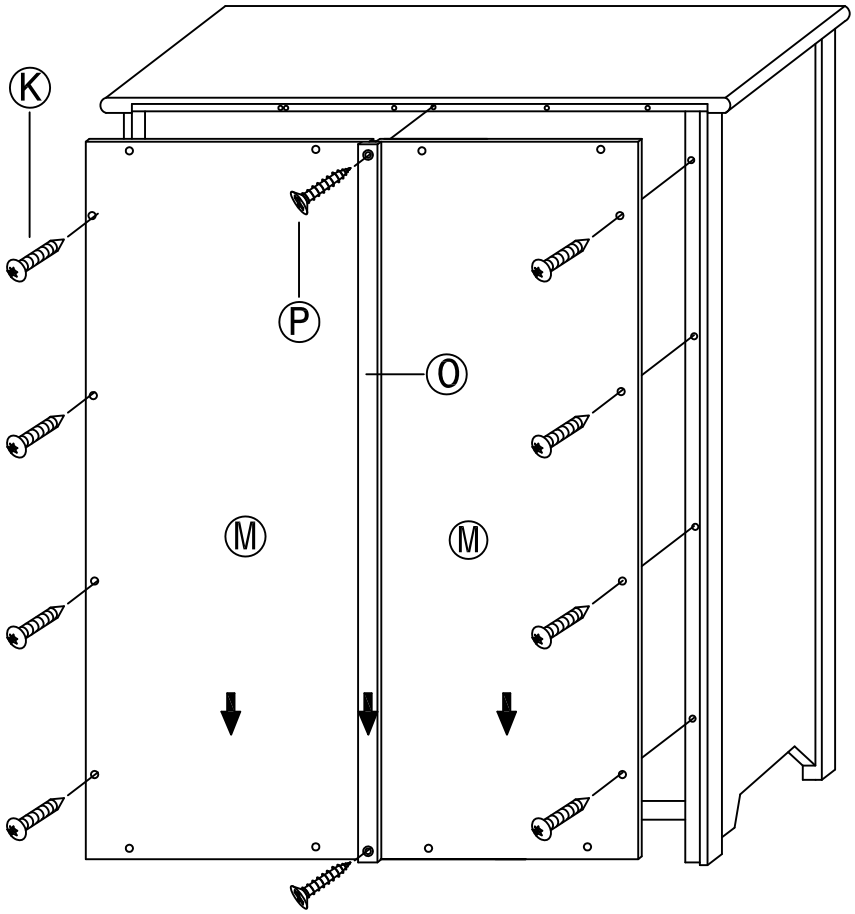

3).ASSEMBLE THE BACK PANEL(M).

- INSERT THE BACK PANEL(M) INTO THE SLOT IN THE REAR PANEL GUIDE(O).
- ATTACH THE BACK PANEL(M) AND REAR PANEL GUIDE(O) USING SCREWS(K/P).

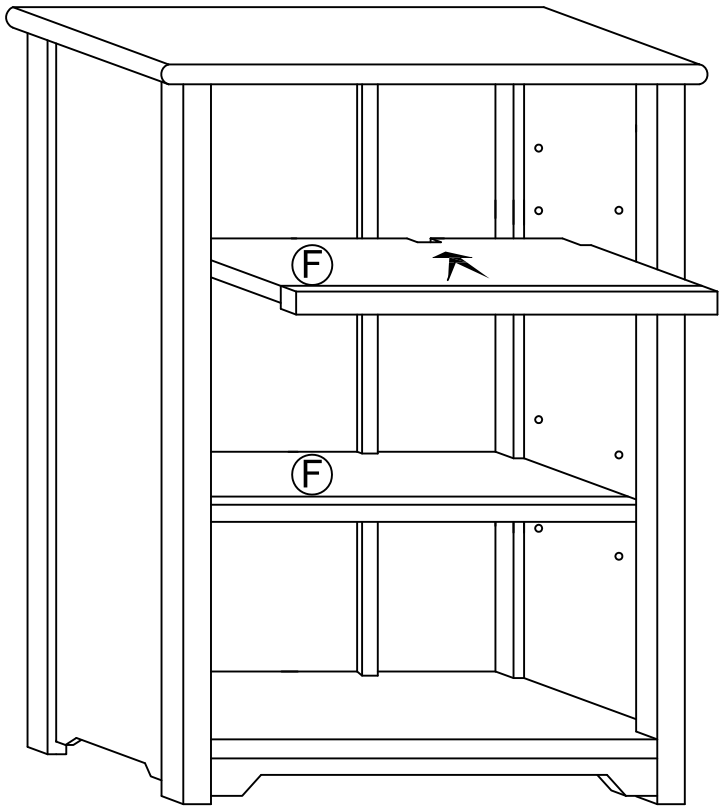

4).ASSEMBLE THE SHELVES(F).

- PUT THE 2 SHELVES(F) ONTO THE SHELF SUPPORTS(G).

I ● ATTACH 2 HOOK(W1) USING 2 SCREWS(X1) IN THE PREDRILLED HOLES OF REAR TOP PANEL.

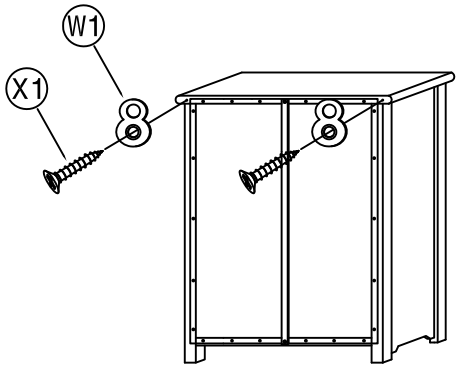

II ● DRILL TWO HOLES INTO WALL, PLEASE REFER TO TOP PANEL'S HOLE DISTANCE AND HEIGHT.

● PUT 2 GECKOS(Y1) INTO HOLES IN WALL AND ROTATE 2 SCREWS(Z1) INTO GECKOS(Y1).